


BLOWER FOR CENTRAL FORCED AIR KIT Model BISZY

Electrical connection :

Rating : 120 Volts, 60 Hz, 1.5 Amp.

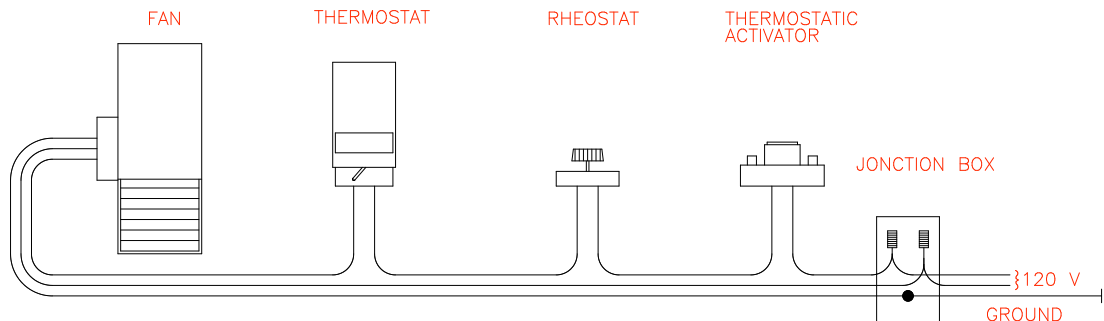

Installation instructions :

- 1) Choose the proper location to install the blower. Put it in place and secure it with four (4) self-drilling screws or ¼ " diameter bolts.
- 2) Install the blower thermostat in that part of the house to be heated by the hot air duct. Do not install the blower thermostat in the room where the fireplace is located.
- 3) Install the thermostatic fan activator (**VTU**) under the firebox. Note : There is a pre-installed bracket under the right side of the firebox.
- 4) Proceed to electrical hook-up as shown on the drawing, making sure to ground the junction box.

Note : The fireplace must be electrically connected and grounded in accordance with local codes or, in the absence of local codes, with the current CSA C22.1 Canadian Electrical Code.

For U.S.A. installations, follow local codes and the National Electrical Code ANSI/NFPA 70.

CAUTION : This fan does not need regular maintenance, however, if periodic cleaning is required, the power supply must be disconnected.