



HEARTH PRODUCTS

HEARTH PRODUCTS KITS
AND ACCESSORIES

750,160M
Rev. K 09/2009

BRICKADED PANEL LINER KITS

**INSTALLATION INSTRUCTIONS FOR BRICKADED PANEL LINER KITS
FOR USE WITH EDV FRONT, EDV MULTI OPEN, MPD & SUPERIOR D- SERIES FIREPLACES**

SHIPPING AND PACKING LIST

Package 1 of 1 contains:

- 1 - Left Side Panel (Kits: H0775, H0776, H0777, H0779, H0781, H0912, H0913, H0914, H0915, H0918, H1549, H1550 & H1551, H2066, H2067, H2068, H2069, H2070, H2071, H2072, H2073, H3207, H4683, H4684, H4685, H4686).
- 1 - Right Side Panel (Kits: H0775, H0776, H0777, H0778, H0779, H0780, H0912, H0913, H0914, H0915, H0918, H1549, H1550 & H1551, H2066, H2067, H2068, H2069, H2070, H2071, H2072, H2073, H3207, H4683, H4684, H4685, H4686).
- 1 - Rear Panel (Kits: H0775, H0776, H0777, H0780, H0781, H0912, H0913, H0914, H0915, H0918, H1549, H1550 & H1551, H2066, H2067, H2068, H2069, H2070, H2071, H2072, H2073, H4683, H4684, H4685, H4686).
- 1 - Baffle (Kits: H0775, H0776, H0777, H0913, H0914, H0915 & H0918, H2067, H2069, H2071, H2073).
- 1 - Installation Instructions.

Package 2 of 2 (for Kits H2023, H2024, H2074 & H2075 only) contains:

- 1 - Rear Log (H1381).

MODELS


This Brickaded Panel Liner Kit (*see Figure 1*) is for use only in the following models of fireplaces:

Color: Boston Buff

Catalog #	Model #	Where Used
H0775	EBLK-35	EDV3530
H0776	EBLK-40	EDV4035
H0777	EBLK-45	EDV4540
H0778	EBLK-PF	EDVPF
H0779	EBLK-ST	EDVST
H0780	EBLK-CL	EDVCL
H0781	EBLK-CR	EDVCR
H0912	MBLK-33T	MPDT3328/MDT3328/DT400
H0913	MBLK-35	MPD3530/D500/DR500
H0914	MBLK-40	D600/DR600
H0915	MBLK-45	D800/DR800
H0918	MBLK-33R	MPDR3328/MDR3328/DR400
H1549	MBLK-35T	DT-500
H1550	MBLK-40T	DT-600
H1551	MBLK-45T	DT-800
H2023	MBLK-40L	MPD4035
H2024	MBLK-45L	MPD4540
H3207	MBL-35ST	MPB35ST/MPD35ST
H4683	MBLK-33B	MPB-33
H4684	MBLK-35B	MPB-35
H4685	MBLK-40B	MPB-40
H4686	MBLK-45B	MPB-45

Color: Black

Catalog #	Model #	Where Used
H2066	BBLK-4T(R)	DT-400/MDT3328
H2067	BBLK-4R(R)	DR-400/MDR3328
H2068	BBLK-5T(R)	DT-500
H2069	BBLK-5R(R)	D500/DR500/MPD3530-B & BDM35
H2070	BBLK-6T(R)	DT-600
H2071	BBLK-6R(R)	D600/DR600
H2072	BBLK-8T(R)	DT-800
H2073	BBLK-8R(R)	D800/DR800
H2074	BBLK-40(R)	MPD4035-B
H2075	BBLK-45(R)	MPD4540-B

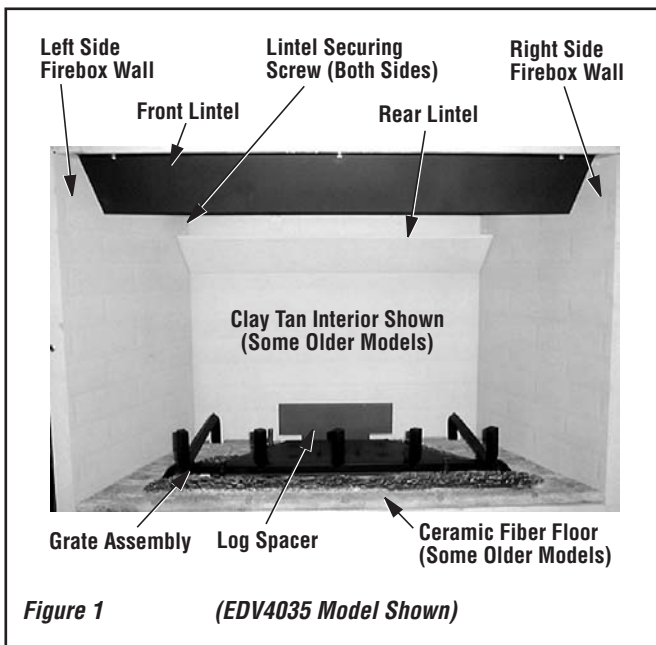


INSTALLATION INSTRUCTIONS - FRONT OPEN FIREPLACES (For Kits: H0775, H0776 & H0777)

Step 1. Follow the procedure "Turning Off Gas To Unit", located on the Lighting Instructions pullout labels in the control compartment of the unit and in the Installation Instructions provided with the appliance.

Step 2. Refer to the appliance Care & Operations/Installation Instructions and gain access to and remove the front glass enclosure panel.

Step 3. Carefully remove the log set from the firebox.

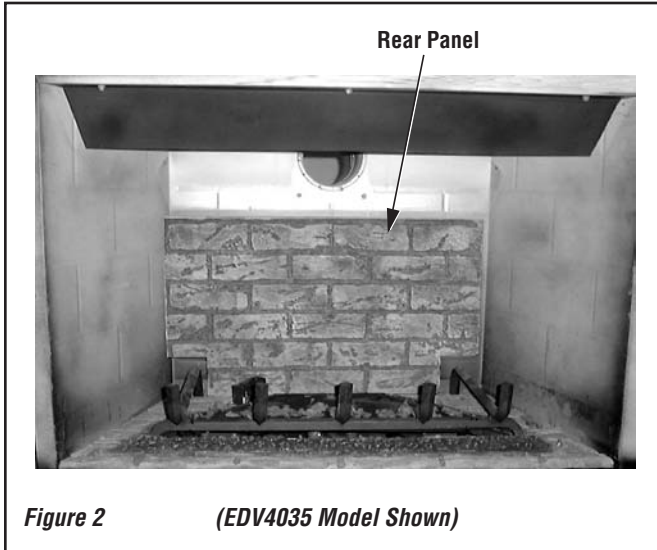


Step 4. Remove the existing rear lintel as shown in **Figure 1** by removing the two screws. Use the screws to plug the two screw holes.

Step 5. Remove and discard the log spacer as shown in **Figure 1** by removing the two screws.

Step 6. Insert the rear panel into firebox and position against the rear wall of the firebox (see **Figure 2**).

Step 7. Carefully slide the left side panel into firebox between the left side firebox wall and the front lintel (see **Figure 3**).

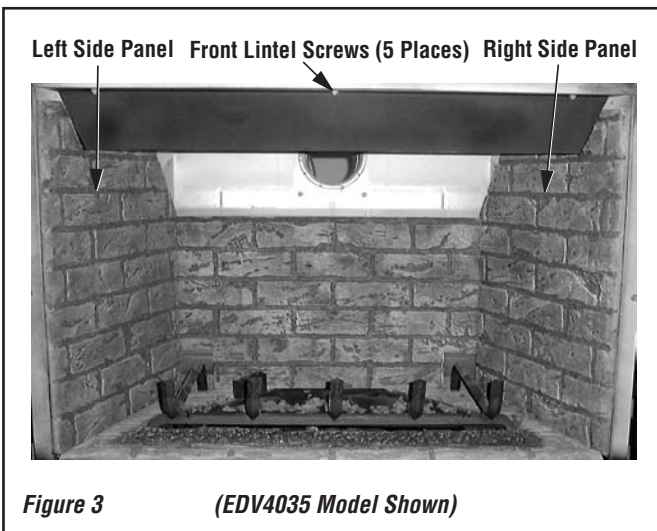


Note: For some older models, the front lintel needs to be removed by unscrewing the five (5) attaching screws, and requires the field trimming of 3/4" on each end, in order for the panels to fit. After trimming, reinstall the front lintel using the five (5) existing screws.

Note: Previous EDV models with clay-tan painted interiors were shipped from the factory with ceramic fiber brick pattern floor finish treatments. These floor panels will raise the side panels of the newest brickaded panel liner kits, causing a misalignment of the brick pattern relation to the rear panel. To correct, either remove the floor panels and replace with decorative volcanic stone to taste (Model FDVS - 80L42) or using a box knife, cut 1/2" off the bottom edge of each side panel.

Step 8. Repeat Step 7 for the right side panel.

Step 9. Place the ceramic baffle into the firebox as shown in **Figure 4**.

Step 10. Carefully replace the log set. Refer to the Care and Operations Instructions and the detailed Log Set Placement Supplement, included with the appliance.

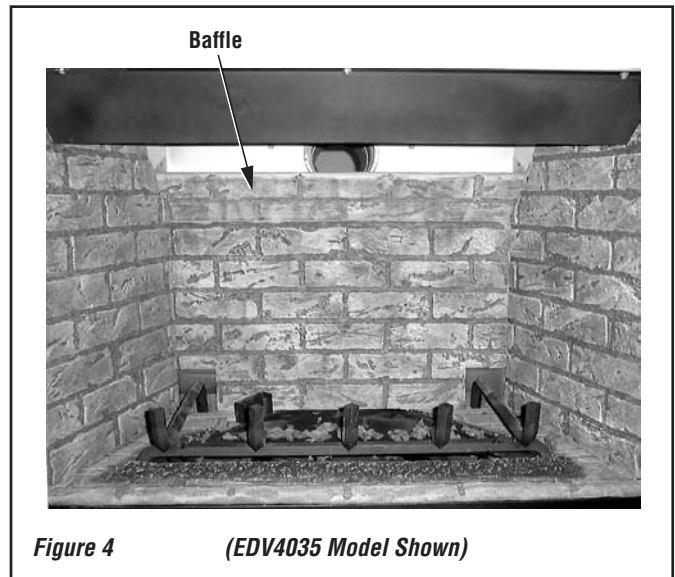

INSTALLATION INSTRUCTIONS - MPD, MPB & SUPERIOR D-SERIES FIREPLACES

(For Kits: H0912, H0913, H0914, H0915, H0918, H1549, H1550, H1551, H2023, H2024, H2066, H2067, H2068, H2069, H2070, H2071, H2072, H2073, H2074, H2075, H4683, H4684, H4685 & H4686)

Step 1. Follow the procedure "Turning Off Gas To Unit", located on the Lighting Instructions pullout labels in the control compartment of the unit and in the Installation Instructions provided with the appliance.

Step 2. Refer to the appliance Care & Operations/Installation Instructions and gain access to and remove the front glass enclosure panel.

Step 3. Carefully remove the log set from the firebox.

Step 4. Remove the existing rear lintel (if applicable) as shown in **Figure 1** by removing the two screws. Use the screws to plug the two screw holes.

Step 5. Insert the rear panel into firebox and position against the rear wall of the firebox (refer to **Figure 2**).

Note: (for Kits H0915, H2024 & H2075 only): Use a utility knife or blade to remove excess material, using perforated line on the back of the panel as a guide.

Step 6. Carefully slide the left side panel into firebox between the left side firebox wall and the front lintel (refer to **Figure 3**).

Note: For some older models, the front lintel needs to be removed by unscrewing the attaching screws, and requires the field trimming of 1/2" on each end, in order for the panels to fit. After trimming, reinstall the front lintel using the existing screws.

Step 6a. (For Kits: H2067, H2069, H2071, H2073, H2074 & H2075) Install provided lintel using the existing screws.

Step 7. Repeat Step 6 for the right side panel.


Step 8. Place the ceramic baffle into the firebox (if applicable) as shown in **Figure 4**.

Step 9. (For Kits: H2023, H2024, H2074 & H2075 only) Replace the rear log (39-7 molded on back) with the log provided (138 molded on back). Please save the original log for future burning without ceramic panel (if desired).

Step 10. Carefully replace the log set. Refer to the Care and Operations Instructions and the detailed Log Set Placement Supplement, included with the appliance.

INSTALLATION INSTRUCTIONS - MULTI OPEN FIREPLACES (For Kits: H0778, H0779, H0780, H0781 & H3207)

Step 1. Follow the procedure "Turning Off Gas To Unit", located on the Lighting Instructions pullout labels in the control compartment of the unit and in the Installation Instructions provided with the appliance.

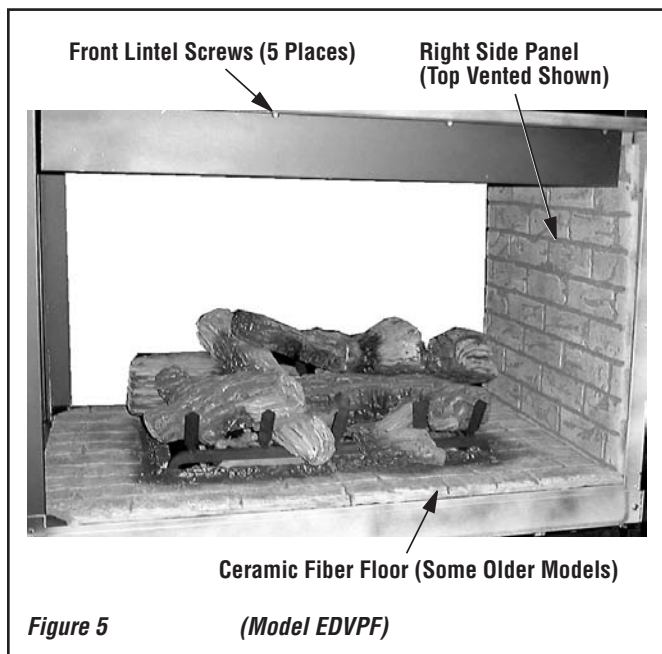

Step 2. Refer to the appliance Care & Operations/Installation Instructions and gain access to and remove the front glass enclosure panel.

Step 3. EBLK-PF (Catalog # H0778)

A. For Top Vented application.


1. Slide the provided side panel into the unit as shown in **Figure 5**.

Note: For some older models, the front two (2) lintels need to be removed by unscrewing the five (5) attaching screws on each lintel, and requires the field trimming of 3/4" on the panel end of the lintel, in order for the panels to fit. After trimming, reinstall the front lintels using the five (5) existing screws.

B. For Rear Vented application.

1. To allow for rear vent access, remove the U-Shaped cut-out from the back of the provided panel. Using a standard utility knife, cut through panel material along the U-shaped line and then discard the cut out piece. See **Figure 6**.

2. Slide the panel into the unit as shown in **Figure 5**. (See **Note Above**).

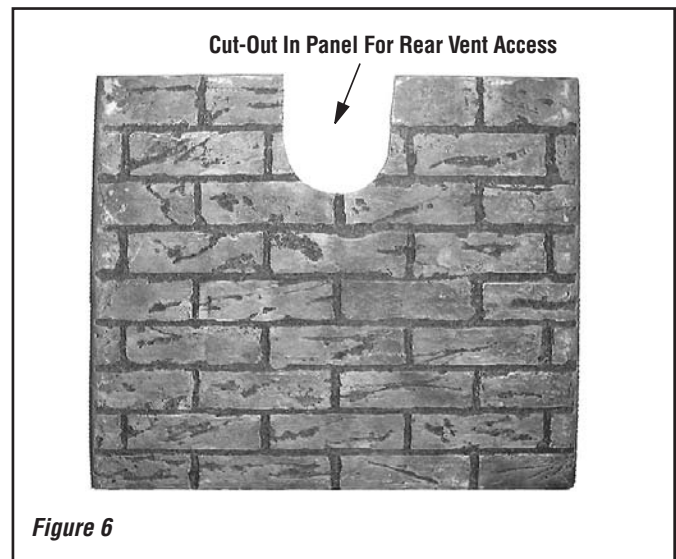

Step 4. EBLK-ST (Catalog # H0779)

A. For Top Vented application.

1. Slide the provided left and right side panels into the unit as shown in **Figure 7**.

Note: For some older models, the front two (2) lintels need to be removed by unscrewing the four (4) attaching screws on each lintel, and requires the field trimming of 3/4" on the panel end of the lintel, in order for the panels to fit. After trimming, reinstall the front lintels using the four (4) existing screws.

B. For Rear Vented application.

1. To allow for rear vent access, remove the U-Shaped cut-out from the back of one of the provided panels. Using a standard utility knife, cut through panel material along the U-shaped line and discard the cut out piece. Refer to **Figure 6**. (See **Note Above**).

2. Slide the panel with the U-shaped cut out removed into the unit (on the vented side of the unit) as shown in **Figure 7**.

3. Slide the other provided panel into the unit, as shown in **Figure 7**. (See **Note On Previous Page**).

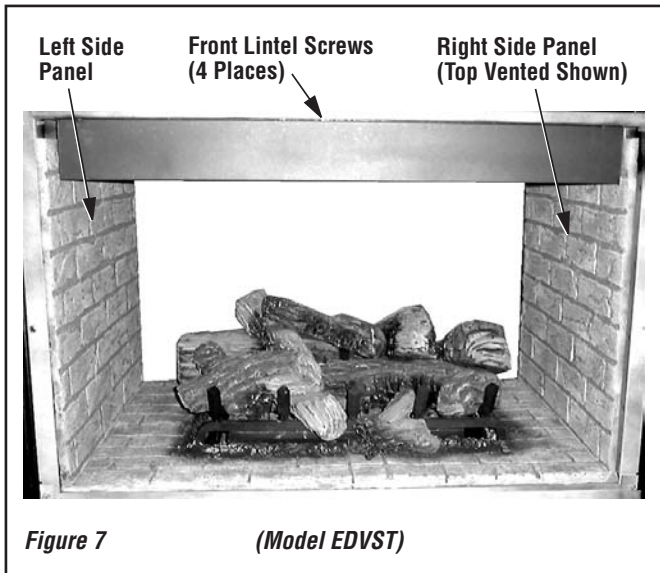


Figure 7 (Model EDVST)

Step 5. EBLK-CL (Catalog # H0780), EBLK-CR (Catalog # H0781)

A. For Top Vented application.

1. Slide the provided rear panel into the unit as shown in **Figure 8**.

Note: For some older models, the side and front lintels need to be removed by unscrewing the two (2) and five (5) attaching screws respectively, and requires the field trimming of 3/4" on the panel end of the lintels, in order for the panels to fit. After trimming, reinstall the side and front lintels using the existing screws.

2. Slide the provided side panel into the unit as shown in **Figure 9**. (See **Note Above**).

B. For Rear Vented application.

1. Slide the provided rear panel into the unit as shown in **Figure 8**. (See **Note Above**).

2. To allow for rear vent access, remove the U-Shaped cut-out from the back of one of the provided panels. Using a standard utility knife, cut through panel material along the U-shaped line and discard the cut out piece. Refer to **Figure 6**.

Note: Make sure to remove the appropriate cut out corresponding to your unit model number, **CL** (corner left), **CR** (corner right).

3. Slide the side panel with the U-shaped cut out removed into the unit (on the vented side of the unit).

Note: For some older models, the side and front lintels need to be removed by unscrewing the two (2) and five (5) attaching screws respectively, and requires the field trimming of 3/4" on the panel end of the lintels, in order for the panels to fit. After trimming, reinstall the side and front lintels using the existing screws.

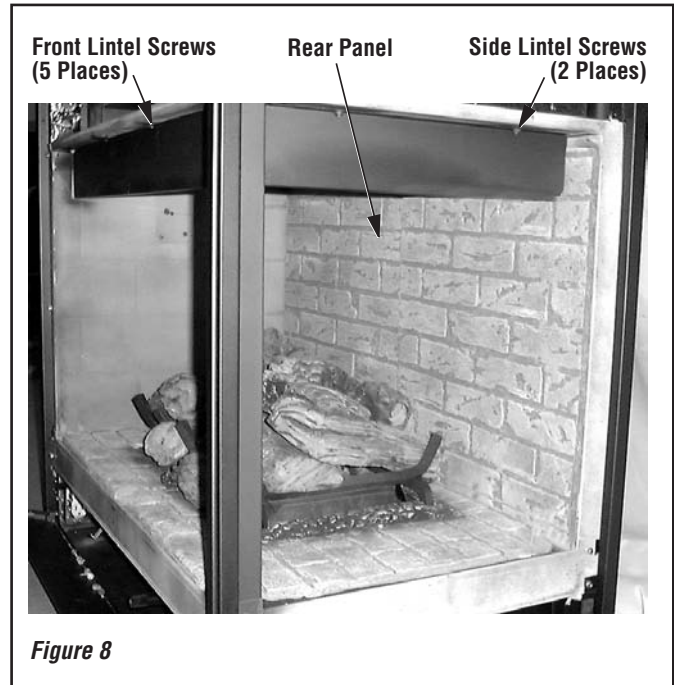


Figure 8

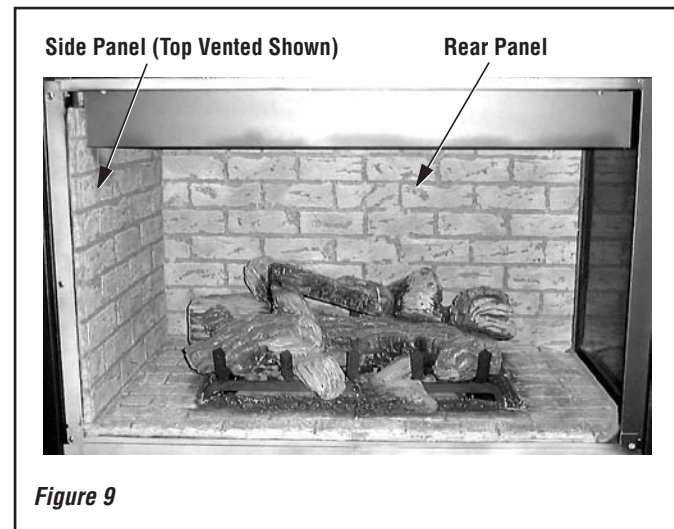


Figure 9

NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.

Lennox Hearth Products reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.