





HEARTH PRODUCTS

HEARTH PRODUCTS  
KITS AND ACCESSORIES

SYMMETRY SERIES ANDIRON KIT

INSTALLATION INSTRUCTIONS FOR THE ANDIRON KIT  
FOR USE WITH SYMMETRY SERIES GAS FIREPLACES

Symmetry Series Andiron Kits		
Model Number	Catalog Number	Andirons
AKT-DV	H7410	 Traditional - AKT-DV
AKC-DV	H7411	 Corinth - AKC-DV

KIT CONTENTS

2 - Andirons, 4 - Attaching Screws and these instructions.

TOOLS NEEDED - Phillips Head Screwdriver.

INSTALLATION INSTRUCTIONS


**Step 1.** Follow the procedure "Turning Off Gas To Unit", located on the Lighting Instructions pullout labels in the control compartment of the unit and in the Installation Instructions (P/N 506023-08) provided with the appliance.

**Step 2.** Refer to the appliance Care and Operations Instructions (P/N 506025-01) to remove the front glass enclosure panel and gain access to the firebox interior.

**Step 3.** Align the holes on the Andiron brackets, with the holes on the fireplace sub-floor and attach the Andiron with the provided attaching screws (see **Figure 1**). It is recommended that two (2) screws be used for each Andiron, however one (1) screw may be used, depending on placement of the Andiron.

**Step 4.** Place all Lava Rock and Rockwool according to the appliance Care and Operation Instructions (P/N 506025-01).

**Step 5.** Refer to the appliance Care and Operations Instructions (P/N 506025-01) and re-install the front glass enclosure panel.

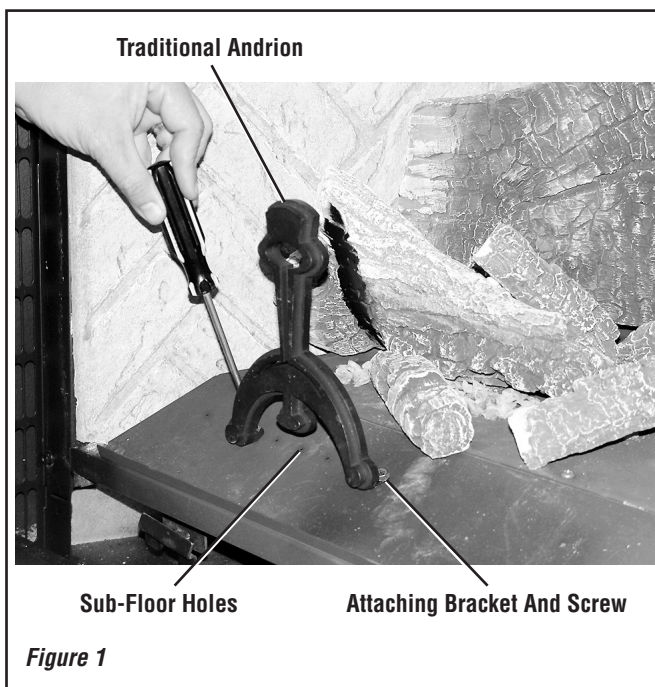

NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.

The manufacturer reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.