



HEARTH PRODUCTS

HEARTH PRODUCTS
KITS AND ACCESSORIES

P/N 506019-21
Rev. A 04/2011

FIREBOX LINER PANELS
Montebello™ See-Through Gas Fireplaces

INSTALLATION INSTRUCTIONS FOR FIREBOX LINER PANELS
FOR USE WITH MONTEBELLO™ SEE-THROUGH GAS FIREPLACES (ALL MODELS)



WARNING

**HOT GLASS WILL CAUSE BURNS.
DO NOT TOUCH GLASS UNTIL COOLED.
NEVER ALLOW CHILDREN TO TOUCH GLASS.**

- Install only when fireplace is OFF and COLD.
- Fireplace surfaces get EXTREMELY HOT!
- The glass on the front of the fireplace reaches EXTREMELY HIGH temperatures and can cause severe burns if touched. Even after the gas is turned off, fireplace surfaces remain extremely hot.
- Keep children away from an operating fireplace. Closely supervise children in any room where a fireplace is operating to prevent contact with glass.


CAUTION

RISK OF PERSONAL INJURY OR PROPERTY DAMAGE.

- Never operate fireplace without a firebox liner panel kit installed. These appliances are NOT approved for operation without liner panels.
- Do NOT abuse glass doors by striking or slamming shut
- Never operate fireplace with glass door assemblies removed.
- Securely tighten door latch screws when reinstalling glass door assemblies to prevent doors from falling out.
- Handle glass door assemblies with extreme care. Replace damaged glass door assemblies with approved replacement assemblies only.

Firebox Liner Kits for Montebello See-Through Gas Fireplaces (All Models)		
Description	Cat. No.	Model
Ceramic, Architectural Stone	H7946	BLK-ARCH-LSM40ST
Ceramic, Black Rustic	H8291	BLK-B-LSM40ST
Ceramic, Buff Herringbone	H7943	BLK-H-LSM40ST
Ceramic, Buff Rustic	H7942	BLK-R-LSM40ST
Ceramic, Venetian Tile	H7947	BLK-VT-LSM40ST
Porcelain, Black	H7948	BLK-BP-LSM40ST

Table 1

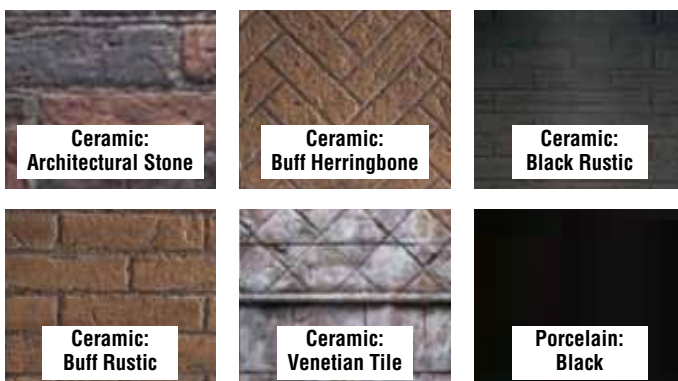

KIT CONTENTS

- (2) ea. Firebox Liner Panels, Side
- (10) ea. #10-16 x 3/8" Screws (provided with porcelain panels only)

REQUIRED TOOLS

- 5/16" Nut Driver
- Scissors or Box Cutters

GENERAL INFORMATION

Each panel kit contains two ceramic or porcelain panels, one for each side wall of the firebox. The ceramic panels have brick-like features in relief.

INSTALLATION INSTRUCTIONS

NOTICE

- Read all steps before starting installation.
- These instructions must be left with the appliance.
- All warnings, precautions, and instructions in the *Installation Instructions* and *Care and Operation Instructions* provided with the appliance also apply to these instructions.
- If you encounter any problems, need clarification of these instructions, or are not qualified to properly install this kit, contact your local distributor or dealer.

Step 1. Remove firebox liner panels (and screws, if installing porcelain panels) from packaging.

NOTICE: Handle panels with extreme care, to prevent damage. Ceramic panels are easily scratched, cracked or broken. Porcelain panels are easily scratched.

Step 2. If not already done, remove glass door assembly from control side of fireplace. See fireplace *Installation Instructions* for complete door removal details.

Step 3. Cut and discard the nylon securing the grate and boxed log set to the firebox. Remove boxed log set, and set aside for later installation.

Step 4. Using a 5/16" nut driver, remove the top air baffle (*Figure 1*) from the top of the firebox by removing four screws (two on each side of the baffle).

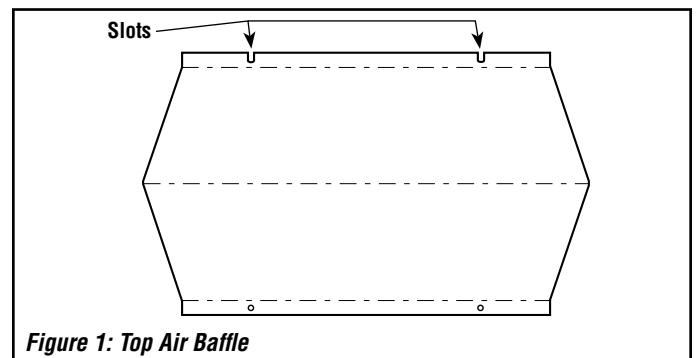


Figure 1: Top Air Baffle

Step 5. Starting on either side of firebox, use a 5/16" nutdriver to remove the two screws securing the floor bracket (**Figure 1**), and then remove the floor bracket.

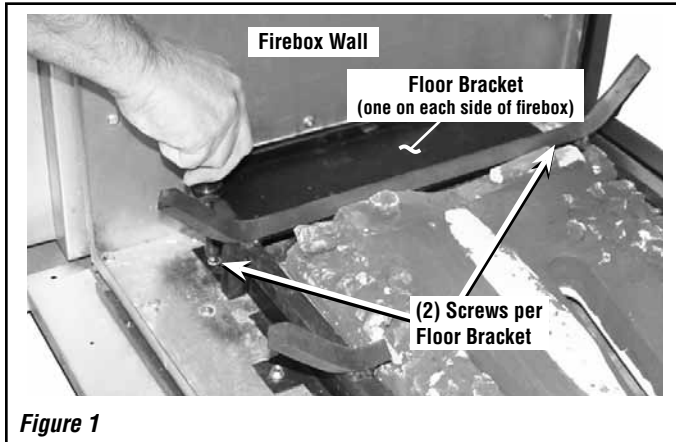


Figure 1

Step 6. Set aside floor bracket and screws for later reinstallation. (**Figure 2** shows firebox with one floor bracket removed.)



Figure 2

Step 7. Using a 5/16" nutdriver, remove L-bracket at top of firebox wall (on same side as bracket just removed). (One L-bracket is shown in **Figure 5**).

For ceramic panel installation: Set aside L-bracket and screw for later reinstallation.

For porcelain panel installation: Discard L-bracket and screw.

Step 8. Install one side panel, as follows:

- Hold panel with top corner notches UP, (see **Figure 3**).
- Insert panel into firebox at an angle (as shown in **Figure 4**), **taking care not to scratch or damage the panel.**
- Carefully push panel up against side wall of firebox (it may be necessary to lift up panel while positioning it).

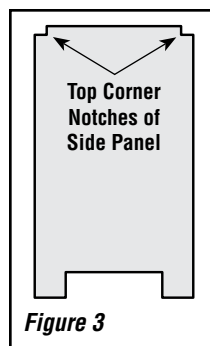


Figure 3

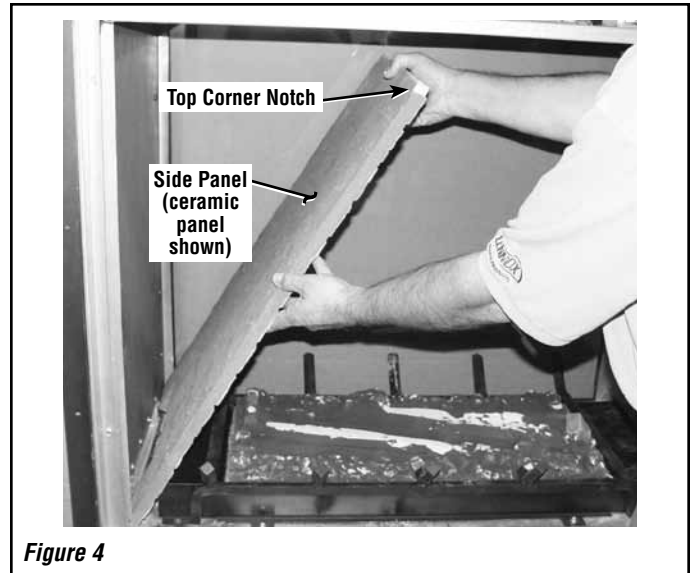


Figure 4

Step 9. Follow applicable steps for panel type being installed:

CERAMIC PANELS: Reinstall L-bracket at top of side wall (see **Figure 5**). **Go to Step 10.**

PORCELAIN PANELS: Using a 5/16" nutdriver, attach panel to top of firebox with (3) screws and to floor of firebox with (2) screws.

(Note: Firebox may already have screws where porcelain panels are to attach that need to be removed first. Either reuse those screws or use the 10 provided screws to attach the panels.)

Step 10. Insert previously removed floor bracket into firebox. Slide floor bracket up against side panel, **taking care not to scratch or damage panel.** Align holes in floor bracket with holes in firebox floor. Reattach floor bracket to firebox floor with two previously removed screws.

Step 11. Repeat **Steps 5–10** to install the other side panel.

Step 12. Reinstall the top air baffle, as follows:

- Loosely install (*do not tighten*) two previously removed screws for air baffle on side of fireplace *opposite the control side.*
- Hook the two open slots in the air baffle (see **Figure 1**) over the two screws, *but do not tighten screws yet.*
- Attach other side of air baffle to firebox top with the other two previously removed screws.
- Tighten all four air baffle screws.

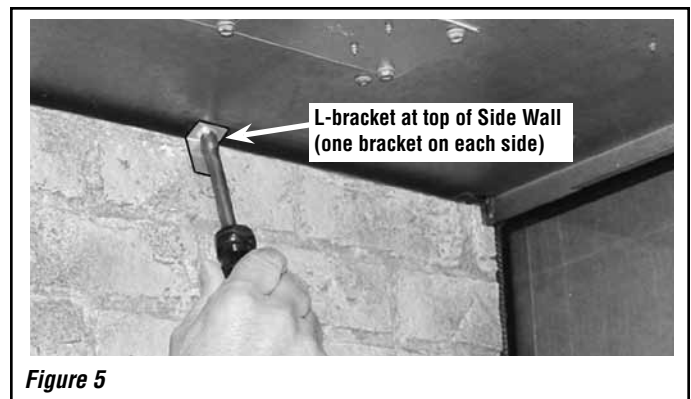


Figure 5

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

Lennox Hearth Products reserves the right to make changes at any time, without notice, in design, materials, specifications, and prices, and also to discontinue colors, styles, and products. Consult your local distributor for fireplace code information.