LENNOX™
HEARTH PRODUCTS

775,263M
Rev. A, 06/2010

REFRACTORY BRICK PANEL KITS
MODEL SHORELINE™

INSTALLATION INSTRUCTIONS FOR INSTALLING REFRACTORY BRICK PANEL KITS FOR USE WITH THE SHORELINE™ GAS FIREPLACE INSERT

DAVE LENNOX signature™ COLLECTION

KIT CONTENTS (See *Figure 2):*

Please ensure that all these parts are in the packaging.

1 ea. Front Bottom Panel (A)
1 ea. Rear Panel (B)
1 ea. Left Side Panel (C)
1 ea. Right Side Panel (D)
1 ea. Top Panel (E)
2 ea. Mounting Brackets (F) (***see note in Figure 2)***
1 ea. Instruction Sheet

Shoreline Refractory Brick Panel Kits		
Cat. No.	**Model**	**Description**
H7987	**SHR-BRK-STD**	**Brick Panel Set, Tan**
H7988	**SHR-BRK-RED**	**Brick Panel Set, Red**
H7989	**SHR-BRK-ARCHSTONE**	**Brick Panel Set, Architectural (shown)**

IMPORTANT NOTE: A refractory brick panel kit is required for proper operation (sold separately). Never operate this appliance without all the refractory brick panels properly installed.

TOOLS NEEDED

5/32” Allen Wrench

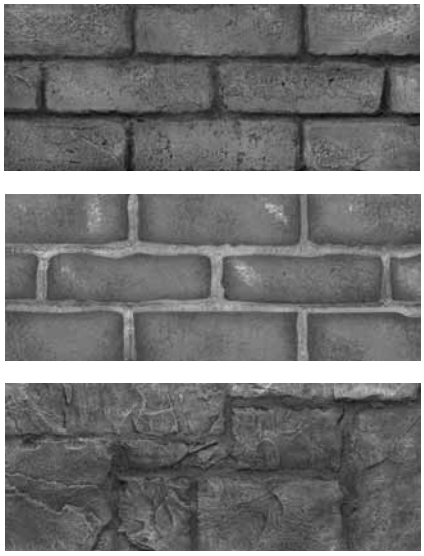

Figure 1

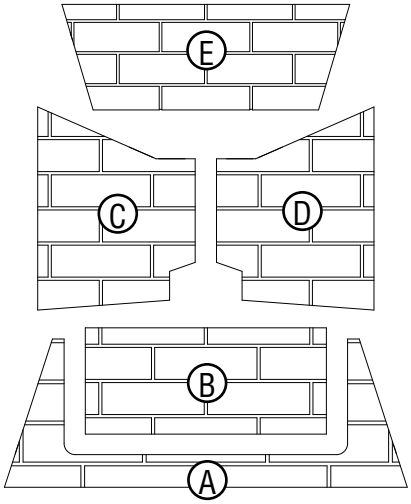

NOTE: The Mounting Brackets will be provided in some panel kits only. If the brick panel kit does not include brackets, use the brackets that came pre-installed in the firebox of the insert.

Figure 2

GENERAL INFORMATION

All of these parts may scratch and bend, great care should be used in handling them.

If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact you local distributor or dealer.

Read this instruction sheet in its entirety before beginning the installation.

ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.

TURN OFF THE FIREPLACE INSERT AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.

⚠ CAUTION

Before you install the refractory brick panels and log set, the insert should be installed in the fireplace, the venting attached, the gas line connected and tested for leaks and the initial burner operation checked.

NOTE: DIAGRAMS AND ILLUSTRATIONS ARE NOT TO SCALE

INSTALLATION INSTRUCTIONS

Step 1. Start with the front bottom panel A. Set the front bottom panel in place with detail side facing up as shown. See ***Figure 3***.

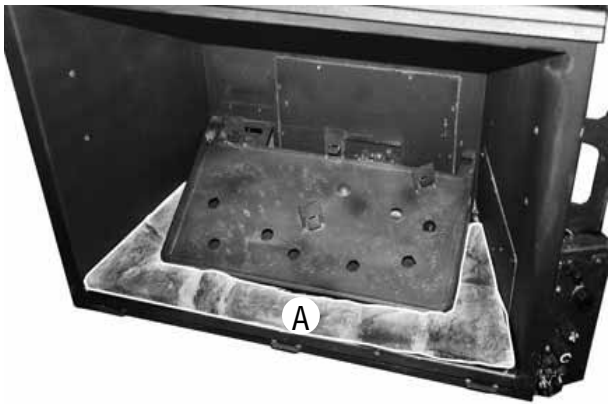

Figure 3

Step 2. Next place the rear panel (B). It will set on the bracket mounted to the blower mounting plate on the back of the firebox, with the rounded edge facing up. See ***Figure 4***.

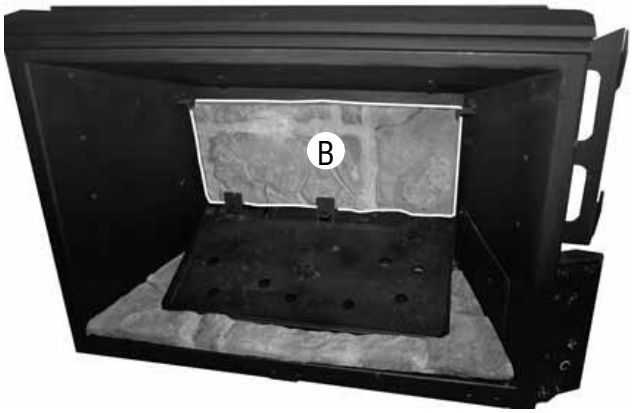

Figure 4

Step 3. Position and slide the side panels against the rear panel. Make sure panels are behind brackets to hold them in at the top. The side panels will hold the rear brick panel against the back of the firebox. See ***Figure 5***.

NOTE: If your brick panel set came packaged with brackets, you should first replace the pre-installed brackets before installing the side panels.

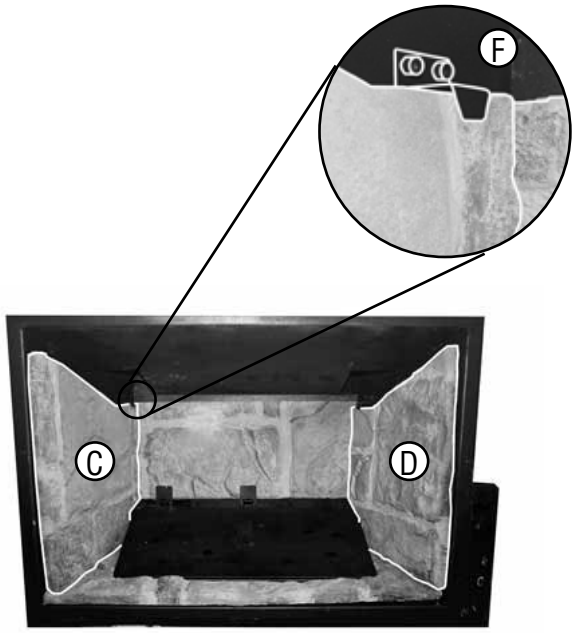

Figure 5

Step 4. Slide the top panel in place with the detailed side down. Make sure panel is positioned all the way back and resting on side panels. Top panel should be flush in front with the side panels. See ***Figure 6***.

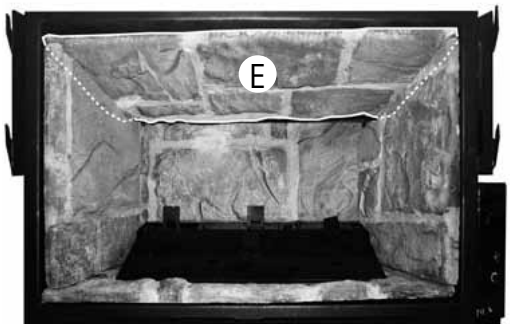

Figure 6

Lennox Hearth Products reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.

LENNOX™
HEARTH PRODUCTS

Printed in U.S.A. © 2010 Lennox Hearth Products
P/N 775,263M REV. A 06/2010

1508 Elm Hill Pike, Suite 108 • Nashville, TN 37210